

Receiver EurosanDOOR GE-RCV1

Instruction

Technical features:

Frequency:	433,92 MHz
Code:	rolling code
Number of channels:	4
Power supply:	12/24 Vac/Vdc
Working current:	max. 50 mA
Memory:	30 remote controls

Works with:


EurosanDOOR Automatization

Learning a code

Press and hold learning button (1), when the red LED light (2) is on, release learning button (1), then press any keys of the remote twice. The LED light (2) is off and then flashes - indicates that the code is learned successfully. Repeat this process to learn the second code.

Deleting existing codes

Press and hold the learning button (1), the red LED light (2) is on, don't release this button (1) until the red LED light (2) is off - this indicates that all the codes have been deleted.

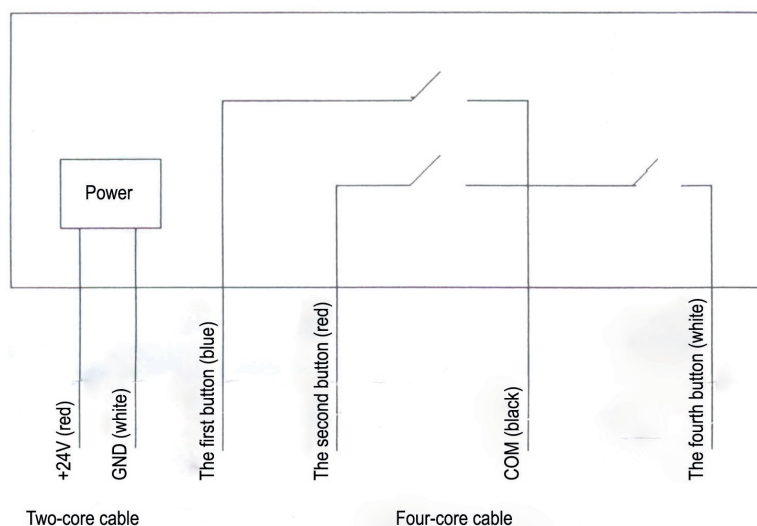

Reference to the following **wiring diagram**:
3 channel relay correspond the first, the second and the fourth button of the remote.

The Eurosandoor receiver is a universal 4-channel receiver that allows the management of multi-user systems. This receiver accepts Eurosandoor rolling code remote controls. The Eurosandoor receiver is compatible with any type of automation that can be controlled by a normally open (NO) relay (Gates, Garage Doors, Barriers, Ramps, Bolts, Pumps, etc.).